 
 


## Mains Power Sockets

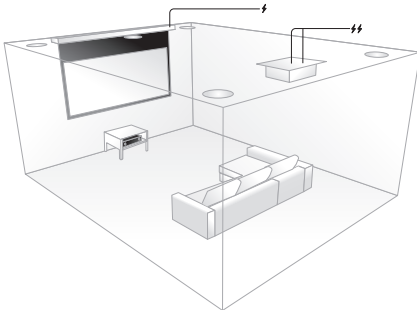

- Projector SCREEN - Single Power Socket on Right Hand Side.
- Projector LIFT - Double Power Socket on Right or Left Hand Side.
- AV Receiver [AVR] - Multiple power sockets are recommended.
- Subwoofer - Double Socket to each subwoofer.

## HDMI Cable

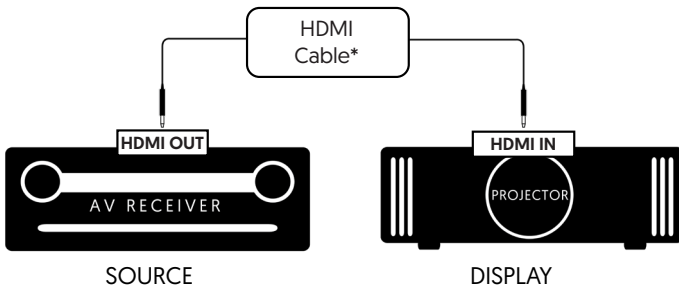


- Ultra High Speed HDMI Cable  
AVR-HDMI-OUT to PROJECTOR-HDMI-IN  
*Set CEC/HDMI Control to turn projector ON/OFF*

- i** Recommended to futureproof but not essential.  
CAT6 Cables :  
2 x AVR to Projector lift  
1 x Projector Lift to Projector Screen

\*Long HDMI cables are directional.

## 12v Trigger Cables

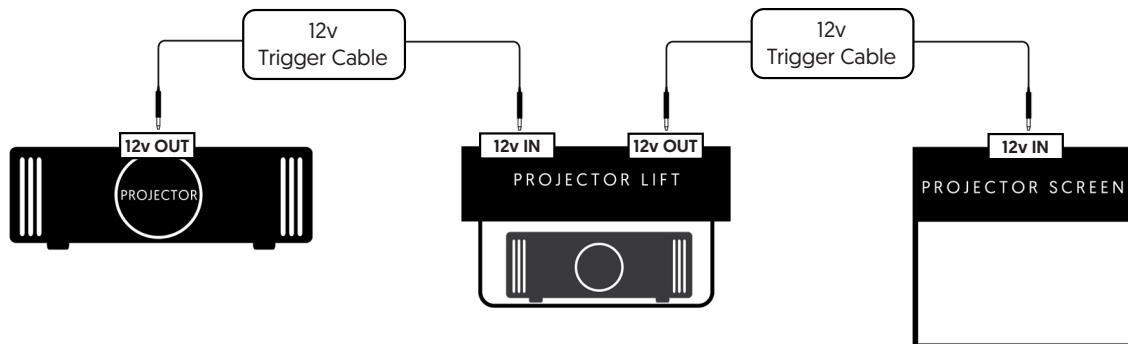

- 12v Trigger Cable - PROJECTOR-TRIGGER-OUT to LIFT-TRIGGER-IN
- 12v Trigger Cable - LIFT-TRIGGER-OUT to SCREEN-TRIGGER-IN

## Speaker & Subwoofer Cables



- Typically 16AWG Speaker cable - From each SPEAKER to AVR.
- Subwoofer RCA Cable - From each SUBWOOFER to AVR.