



Easy start
with videos

Digital Projector Quick Start Guide




Home Cinema Series | W4100i / W4100

BenQ PN: 4J.R0801.003_V1.02

© 2026 BenQ Corporation. All rights reserved. Rights of modification reserved.



Package contents

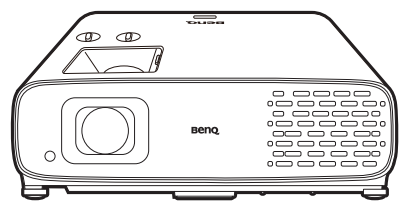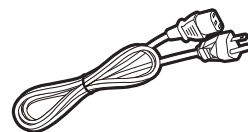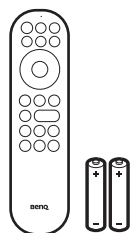

(Availability of batteries
varies by region)



QS02
(Availability varies by region)



Calibration report



Lens cover
(pre-installed)




Setup

1




(AAA batteries. Purchased
separately if not included)

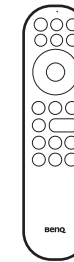


2

(Required only for models with QS02)

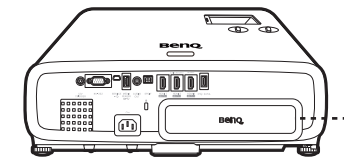


1

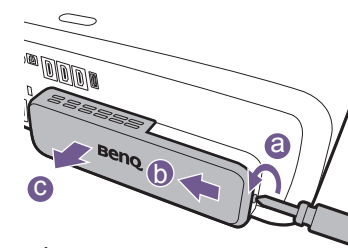


(A cross-pointed screwdriver.
Not included)


2

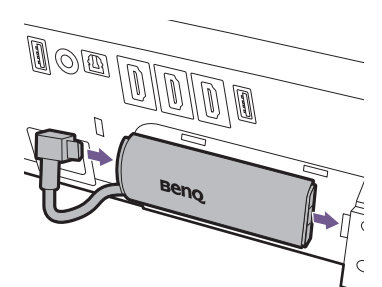


3

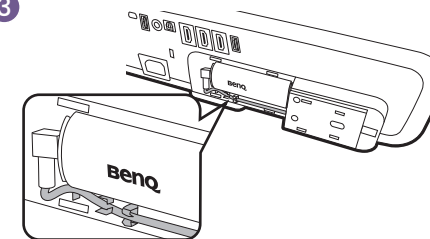


4

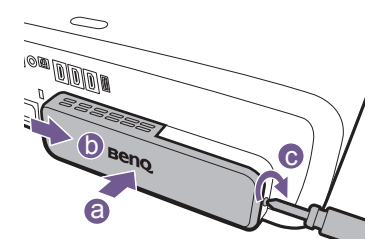


3

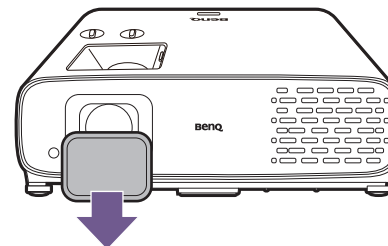

4


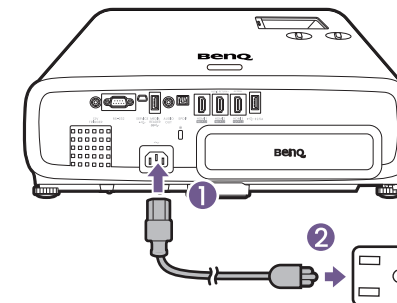


5

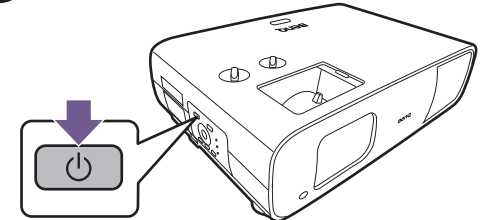

6

 Start setup

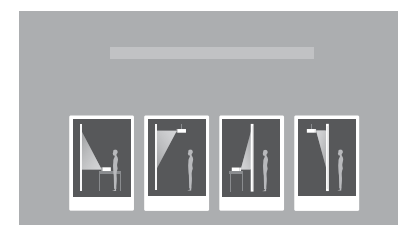

✓ All done. Enjoy!





(Image may vary by region)

HDMI
HIGH-DEFINITION MULTIMEDIA INTERFACE
(For models with HDMI inputs)





P/N: 4J.70J01.001


Image adjustments

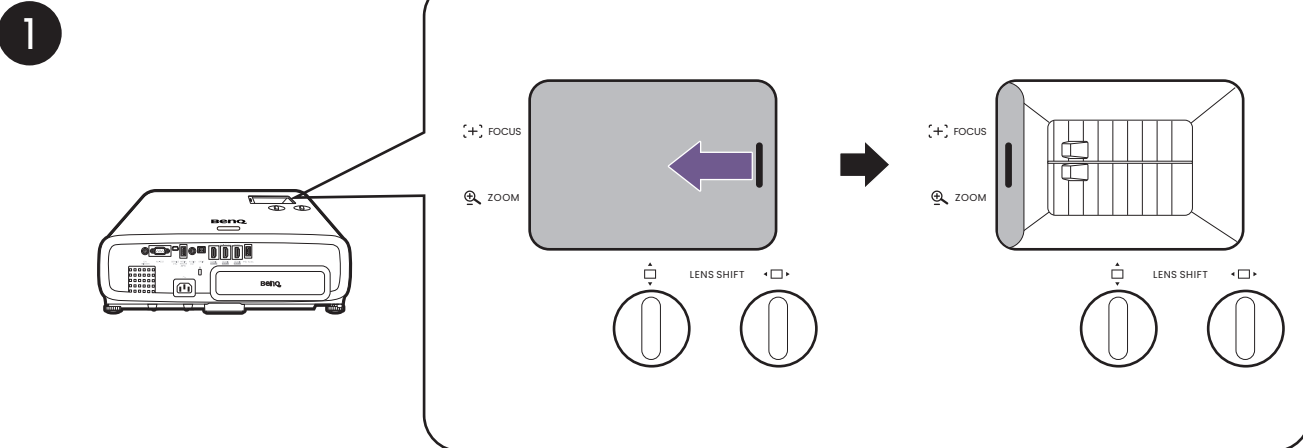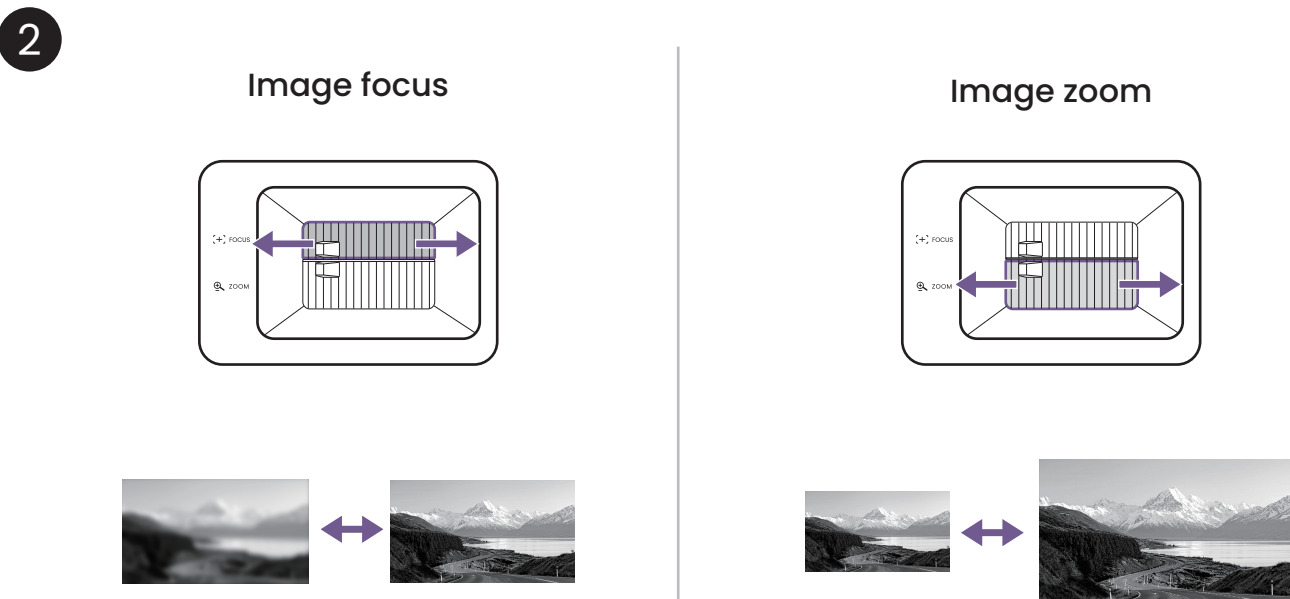

Lens shift

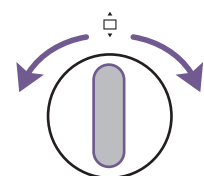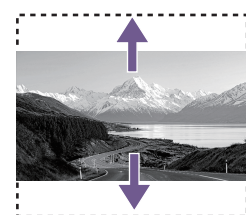


Lens shift


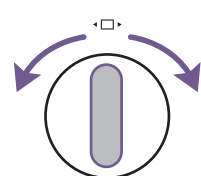


Ceiling mounting

Screw type: M4 / Compatible BenQ ceiling mount: CM00G3

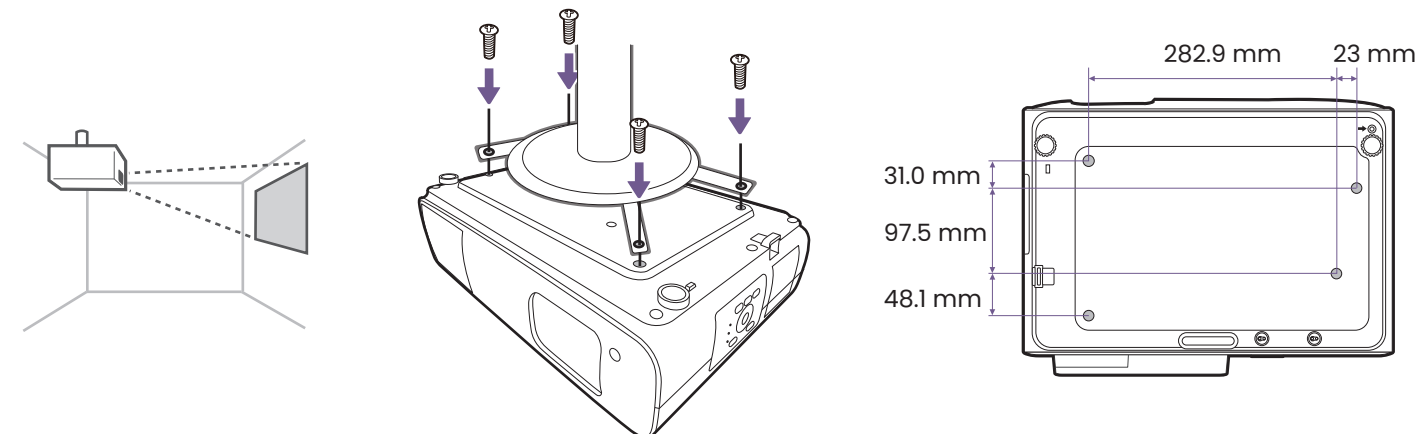

Input selection

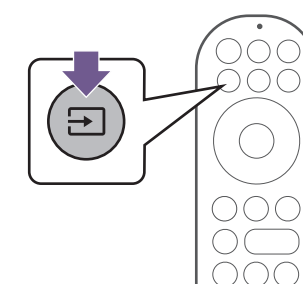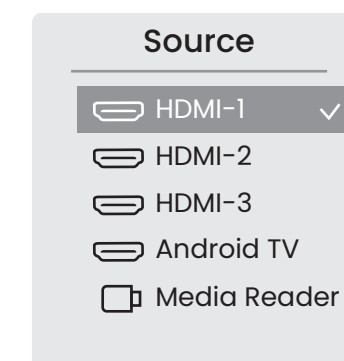

Optical fit screen adjustment

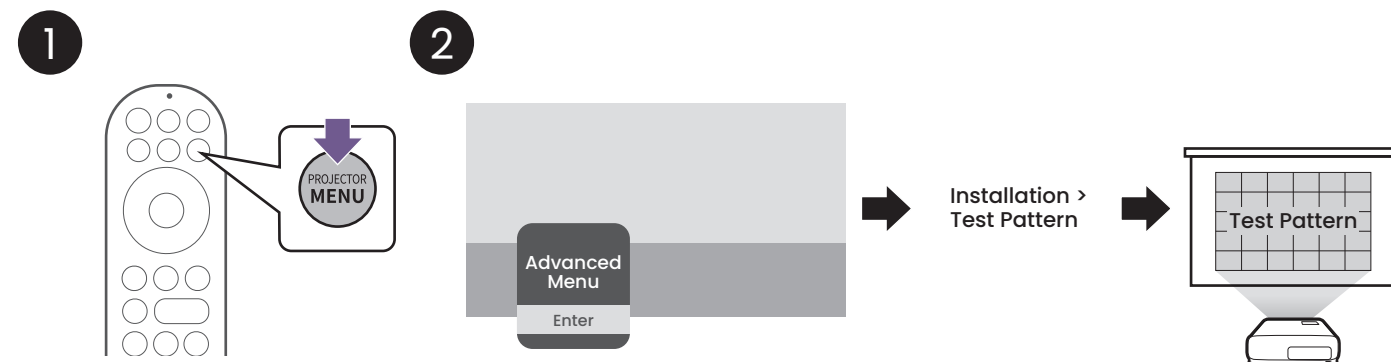


Image zoom & Lens shift

